


# **Toilet Waste Pump**

Model: TMC-0620921

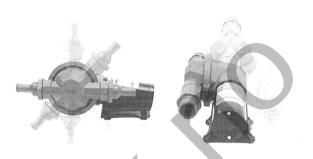



#### **Product Feature:**

- Single diaphragm pump designed to handle unmacerated toilet waste / black water.
- Self-Priming pump and can be run dry.
- Non-Choke valve, no filter required.
- Can pump a mixture of air and water.
- In-lined inlet/outlet valves to allow the free flow of debris.
- Double outlet valves to ensure continuous flow.
- Adjustable clamping ring allows the head assembly to be rotated 360° to accommodate plumbing position.

### **Specification:**

Motor : DC-12 V / 24V

Capacity : 20 LPM (5.2 GPM)

Amp Draw : 7 A (12V) / 3.5 A (24V) Fuse Size : 10 A (12V) / 5 A (24V)

Delivery Head : (5 M)


Self Priming : (0.5M)

Hose Dia. : 1-1/2" (38 mm)


Order No. : 503-6209021 12V

503-6209022 24V

## **Dimension Drawing:**

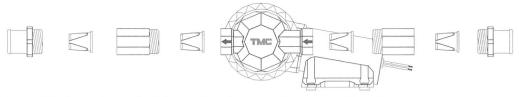


• Note: Choke valves shall be in-lined and of the same direction. Follow the direction indicated on pump ports.

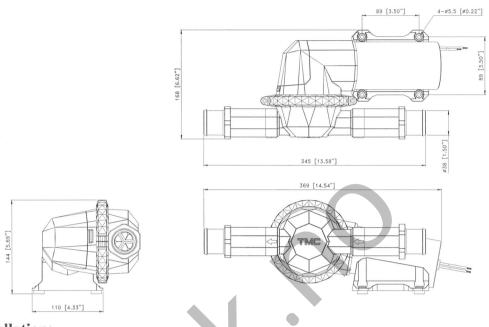


#### **Installation:**

- The TMC-0620921 is self priming up to 0.5m
- Use multi positional ports for easy mounting of the pump.
- If mounted vertically the motor should be above the pump head.
- Use rubber grommets provided to absorb vibration.
- Plumbing Connections: Use 38mm(1-1/2") ID. non-collapsible waste type suction hose.
- Connect the hose to inlet and outlet of pump using two stainless steel hose clamps at both ends.
- All suction connections must be airtight and free of sharp bends or restrictions.

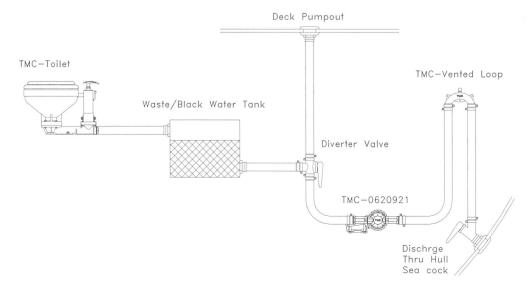


# **Rotation of Pump Head:**


- 1. Base on working condition, determine the position of the pump head.
- 2. Place the pump in the place you need, then follow the steps:
  - a. Use slot screw driver to remove end cover.

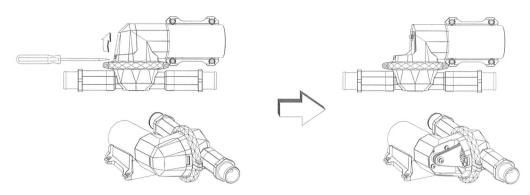


b. Use cross screw driver to remove the 4 screws.

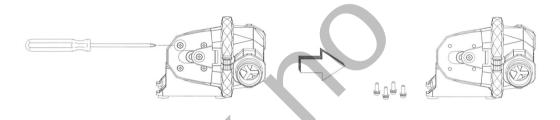

c. Rotate the pump head to the position you desire.

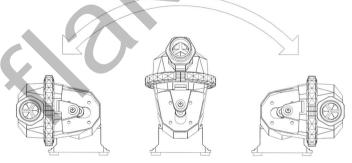



- d. Place the 4 screws back and secure tightly.
- e. Put the end cover back press the clip and close the cover until you hear a click.

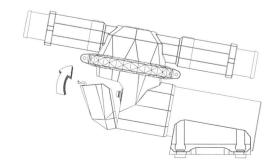


# **Rotation of Ports:**

- 1. Remove the 2 screws and the clamp.
- 2. Rotate the ports to the desired position.

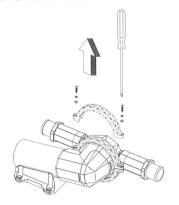

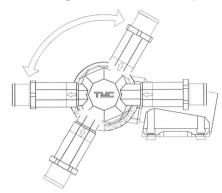


3. Place the clamp back and tight firmly.

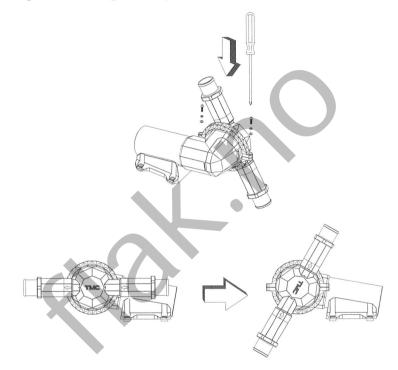

# **Operation:**

The dc motor pump is designed for intermittent duty and should not be run for more than 30 minutes continuously.

# Wiring Diagram:

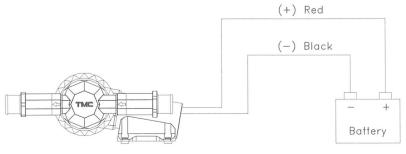

TMC-0620921