 


CERAMIC HEATER

USER MANUAL

► MODEL ER887E

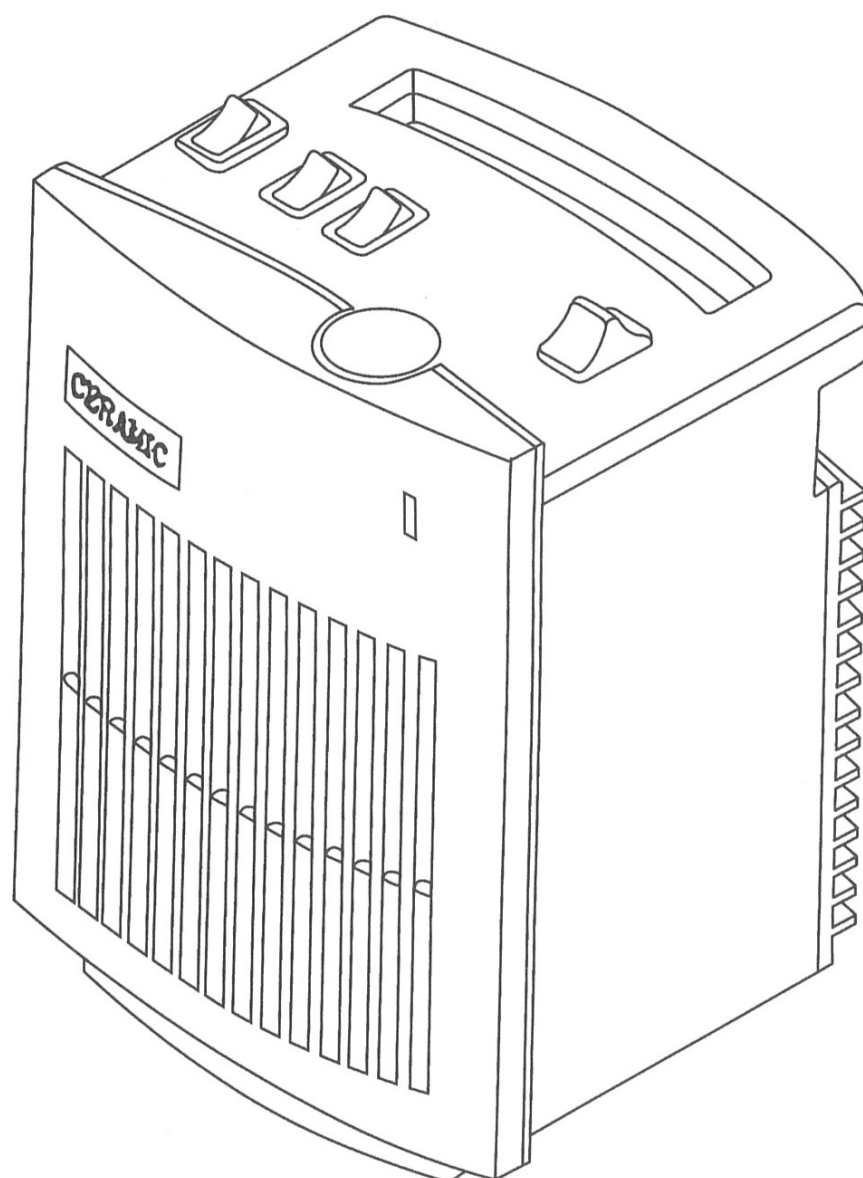

MODEL ER887E

CERAMIC HEATER

<u>Operation Instructions</u>	<u>2</u>
<u>Cleaning</u>	<u>3</u>
<u>Important Safeguard</u>	<u>4 - 5</u>
<u>Caution & Warning</u>	<u>5</u>

Operation Instructions

1 Power Switch

ON the power is on
OFF..... the power is off

2 Heater Switch

ON the hot air
OFF..... the cool air

3 Function Switch

FULL SPEED auto
HEAT ADJ manual

4 Manually adjustable to control fan speed and the amount of hot or cool air.

5 Economic Switch :

 
 
When the rocker switch turns on at position "ECO", the running current applies on 2 amp. saving energy mode automatically.

ECO Switch

Turning on the ECO switch will restrict current absorption to about 2 Amperes. This function is of importance especially for camping or in a marina. The weak locally provided functions would be used too much without the ECO switch. At worst power supply can fail on the campsite or in the marina. The power of the advice will be reduced by the ECO switch, but you will not have to do completely without any heating.

6 Dust Filter.

7 Mechanical tip-over control turns the heater off if it is accidentally knocked off.

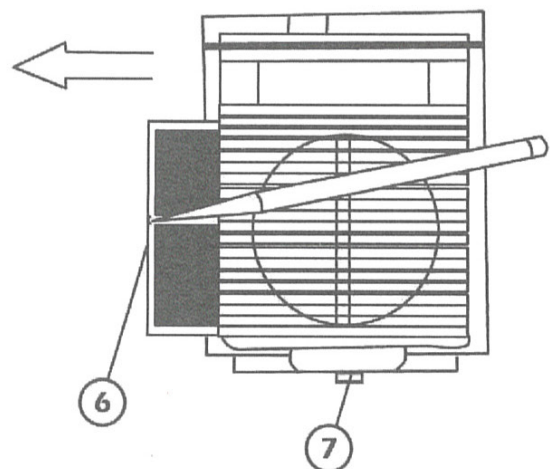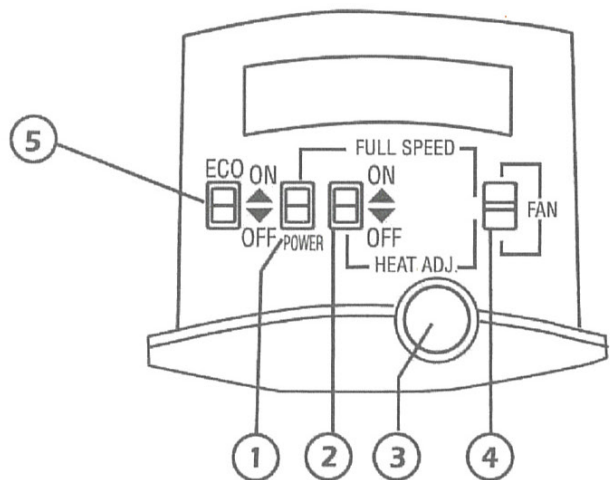

Cleaning

- 1 Before cleaning, turn off the power at (1) and unplug the appliance.
- 2 Use your pencil tip to slide out the filter at (6)
- 3 Clean the dust filter with a vacuum cleaner.
- 4 Re-install the filter.
- 5 Close the casing with a screw.
- 6 If the heater has not been used for a long period or has been dusty, it should be checked and cleaned properly.

Please Note : Safety Thermal Cut Off System






This overheat protection system automatically turns off the heater if an overheat condition were to occur. The unit can resume power after all overheat caused objects or conditions, such as covering by a towel or the heat outlet too closed to a wall, are removed.

Power Sources :	230V - 240V ~ 50Hz
Power Consumption :	1,500W Max. Heat Setting
Unit Size :	15cm(W) x 13cm(D) x 21cm(H)
Unit Weight :	1.5kg

Important Safeguards

⚠ READ ALL THE INSTRUCTIONS BEFORE USING THIS HEATER

     - ▶ This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as drapes and other furnishings, away from heater.
- ▶ Extreme caution is necessary when any heater is used by children or invalids and whenever the heater is left operating and unattended.
- ▶ Do not use outdoors.
This heater is not intended for use in wet or moist locations, such as bathrooms or laundry areas. Never locate heater where it may fall into a bathtub or other water container.
- ▶ A heater has hot and arcing or sparking parts inside. Do not use it in an areas where gasoline, paints or flammable liquids are used or stored.
- ▶ Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.
- ▶ To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

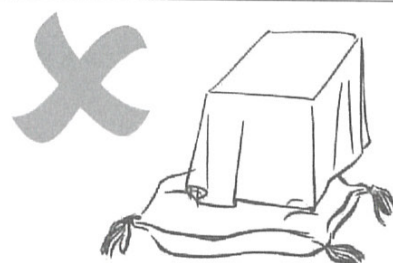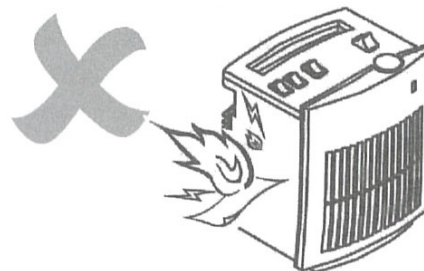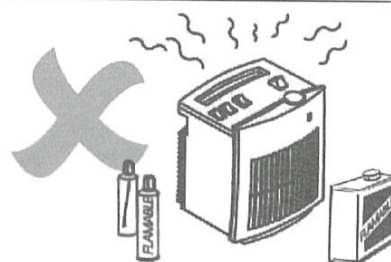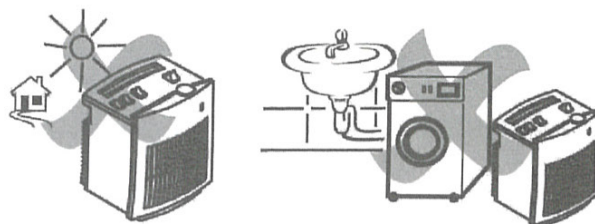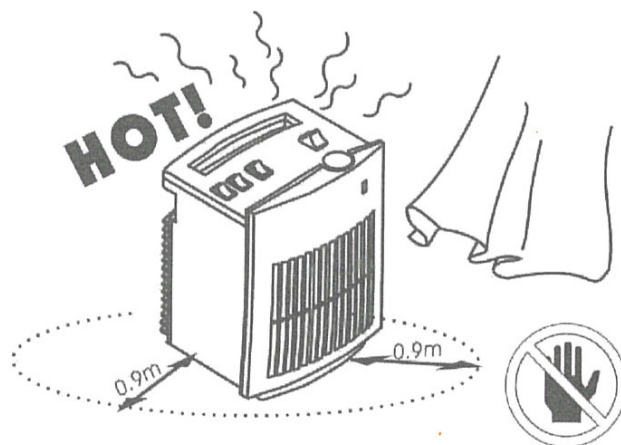

- ▶ Always unplug heater when not in use. To disconnect heater, turn controls to off, then remove plug from outlet.
- ▶ This heater is not intended for use with an extension cord. Plug the cord directly into an appropriate wall receptacle, or if this heater is used with an extension cord, the conduction wire inside should be at least 1 mm in diameter and rates not less than 10 AMP.
- ▶ Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- ▶ Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repairs.
- ▶ Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- ▶ Save these instructions.

Caution

- This heater only operates in upright position.
- Do not cover the appliance when operating.
- Store the heater in cool dry location when not in use.
- Do not store until the heater cools down.

Warning

- Any other servicing should be performed by an authorized service representative.
- The heater must not be located immediately below a socket-outlet.

