 


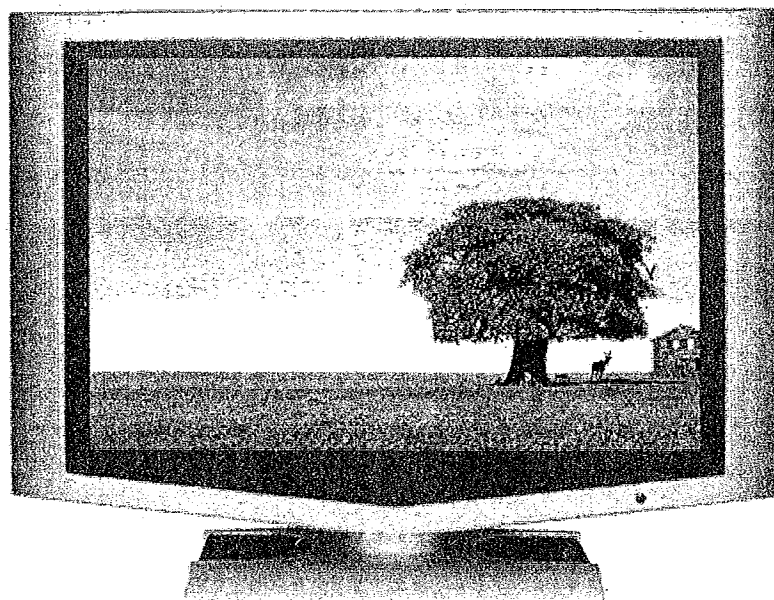

LT15H1/LT19H1

15"/19" LCD TV

Manual

LiVinn

Norsk versjon

1 – Advarsel


- Ved feil bruk og feil installasjon bortfaller garantien.
- Denne Tv kan benyttes på både 12v og 220v, er du i tvil om strømtilkobling, søk hjelp av fagperson.
- Før bruk vær sikker på at du har riktig volttilkobling.
- Ikke installer LCD tv i direkte sollys, eller nær en varmekilde.
- Hvis apparatet kommer i kontakt med vann, koble fra strøm og la den tørke.
- I perioder med ekstrem fuktighet, bør TV tas med hjem fra båt og bobil hvis det går litt tid mellom hver gang den benyttes.

2- Features

- Kan tilkobles analog PC input.
- Kan tilkobles AV og S-video input.
- Kan tilkobles SCART input.
- Har TV mottaker.
- Text TV
- Fullfunksjons fjernkontroll


Items		Relevant illustrations	
LCD		15" TFT LCD	19" TFT LCD
Brightness		250cd/m ²	300cd/m ²
Life-span of the screen backlight		50,000 hours	
View angle		160° H / 135° V	150° H / 135° V
Resolution		1024×768	1440×900
Features	TV standard	PAL- D/K, I, B/G SECAM D/K, B/G	
	Channel amount	100	
Input interface	PC	DB15 VGA input interface	
	AV video, S-video	Composite video input interface, S-video input interface	
	TV	75Ω ANT.	
	Scart	Scart input interface	
	Audio	Audio 1 (left, right audio input interface for PC) Audio 2 (left, right audio input interface for AV)	
Power magnify		3W×2	
OSD language		English, French, Spanish, German, Italian, Portuguese	
Power supply		DC 12 V	
Power waste		< 40W	< 50W
Accessories		Instruction Manual, Remote control, AC adapter, AC wire	

 Note: Designs and specifications is subject to change without prior notice.

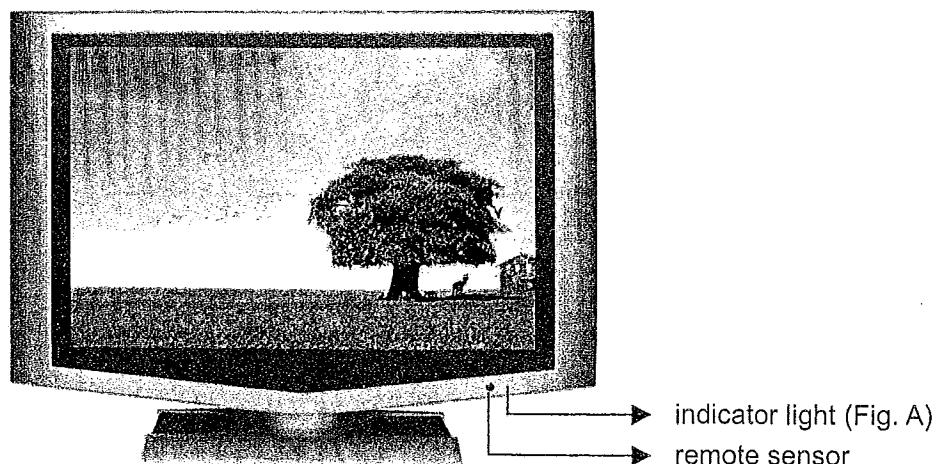

4 – Illustrasjon av interface panel

 (1) Illustration Control board

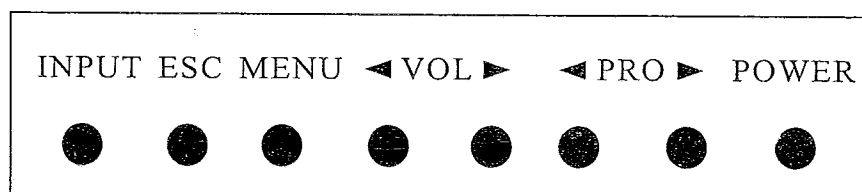


A) Illustrasjon av kontroll panel

INPUT	- Velg input signal
ESC	- Exit/ut av meny
MENY	- Enter meny
<VOLUM	- Volum ned
>VOLUM	- Volum opp
<PRO	- Tv kanaler, ned
>PRO	- Tv kanaler, opp
POWER	- Strømtilførsel av/på


B) Indikator lys(Fig A)

AV,S-video,PC, SCART mode: Når det er signal inn vil dette lyse grønt
 Er det ikke signal inn vil det lyse orange.
 Når Tv står i Stand by vil det lyse rødt.

 (2) Illustration interface panel

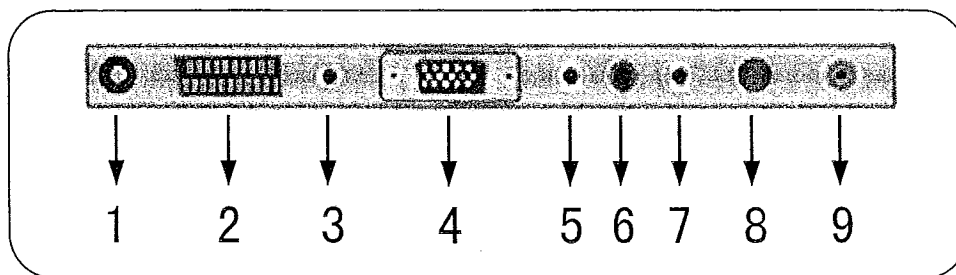

 - 1 : Power input interface (+12V)
- 2 : Scart input interface
- 3 : The first group of audio input interface L/R, connected with the PC
- 4 : DB15 VGA interface
- 5, 6 : The second of audio input interface L/R, connected with the audio signals from exterior AV device PC audio input interface
- 7 : Composite video input interface
- 8 : S-VIDEO input interface
- 9 : TV antenna interface

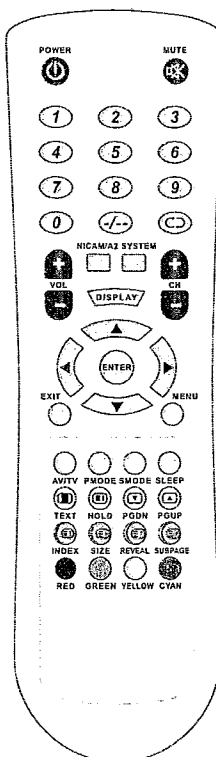

Knapper på Fjernkontroll(se tegning forrige side)

Knapp	Beskrivelse
1) Power	Strøm på/av(standby)
2) Mute	Mute
3) 0-9	TV kanaler eller valg av sidenr Text TV
4) -/--	1, 2 eller 3 sifre på kanalvalg
5)	Skifte hurtig mellom kanaler
6) Vol+	Lydstyrke opp
7) Vol-	Lydstyrke ned
8) CH+	Kanalnr opp
9) CH-	Kanalnr ned
10) NICAM	Stereo valg
11) SYSTEM	Valg av TV system
12) DISPLAY	Vis gjeldende TV kanal
13) <	Orienter til venstre i meny
14) >	Orienter til høyre i meny
15)	Orienter opp i meny
16)	Orienter ned i meny
17) ENTER	Enter / velg
18) EXIT	Exit/avslutt
19) MENU	Meny
20) AV/TV	Velg mellom TV/SCART/PC....
21) PMODE	Bilde
22) SMODE	Lyd
23) SLEEP	Timer valg

24- 36 Text TV funksjoner

24) TEXT	Text TV aktiv
25) HOLD	Holder gitt side hvis valgt side består av flere sider
26) PGDN	Foregående side
27) PGUP	Neste side
28) INDEX	Indeks side
29) PICTURE	Slår av text TV og går over til TV
30) SIZE	Endrer display størrelse
31) REVEAL	Viser/skjuler skjulte ord
32) SUBPAGE	SUB kode sidetilgang

33 -36 hurtigvalgstaster, varierer fra kanal til kanal.

TILKOBLINGER AV FORSKJELLIGE INPUT SIGNALER OG LCD TV

 
PC Tilkobling

- Power på TV og PC må være av.
- Plugg 15-pin plugg til VGA video på PC, og plugg den andre enden til video input på TV
- Koble til strøm, slå så først på TV og deretter PC
- Trykk INPUT knapp for å sette video input på LCD TV til PC

Samme fremgangsmåte benyttes ved tilkobling av andre eksterne tilkoblinger som AV, S-Video, SCART. Du trykker INPUT og velger gitte media.





KOBLE TIL TV SIGNALER

- Pass på at TV power er av.
- Koble antennekabel til TV
- Slå på strøm
- Trykk INPUT knapp og sett input til TV mode.

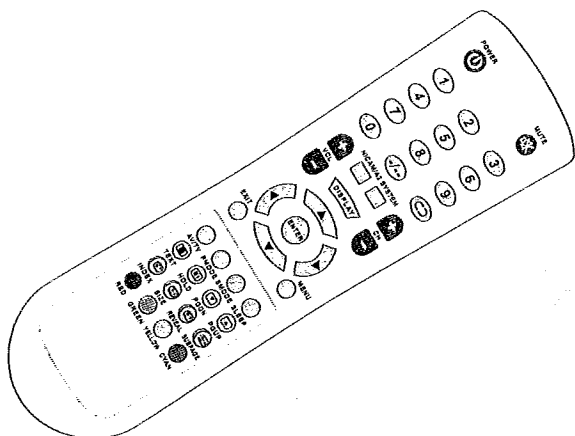



Når strøm er tilkoblet lyser indikatorlyset orange eller grønt(TV mode). Når TV har signaler vil det lyse grønt, den forblir orange hvis ingen signaler mottas.

Meny Navn	Meny bilde	Instruksjon
Image Menu		1. Scheme: There are four modes: Normal/ Vivid/ Sports/ Nature. 2. Brightness 3. Contrast 4. Hue(NC): This item is disabled but at NTSC system. 5. Saturation 6. Sharpness 7. Color Temp: There are three modes: Cool/ Warm/ Standard.

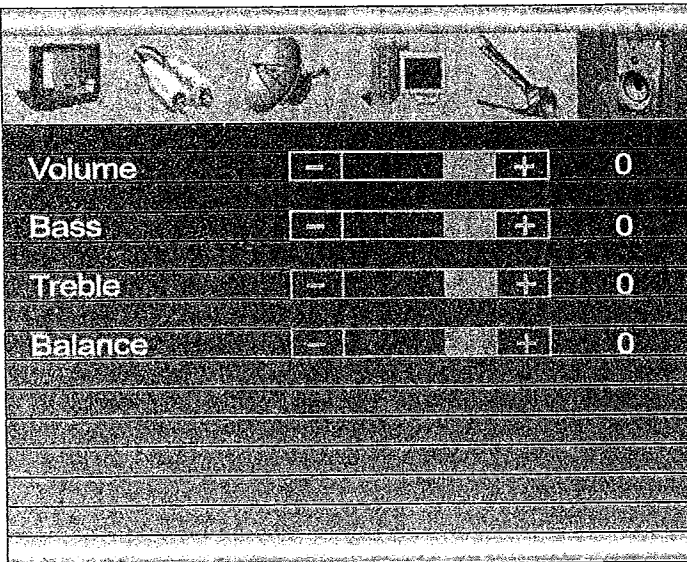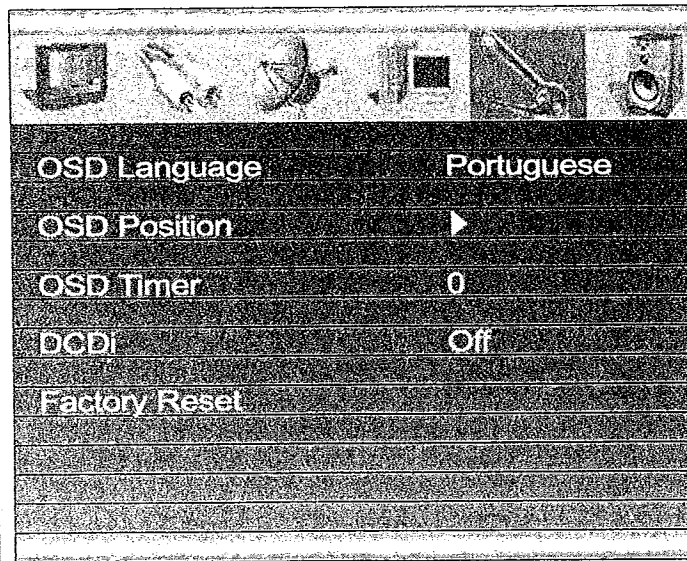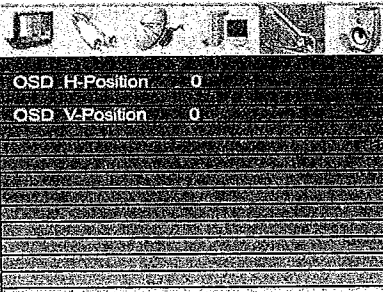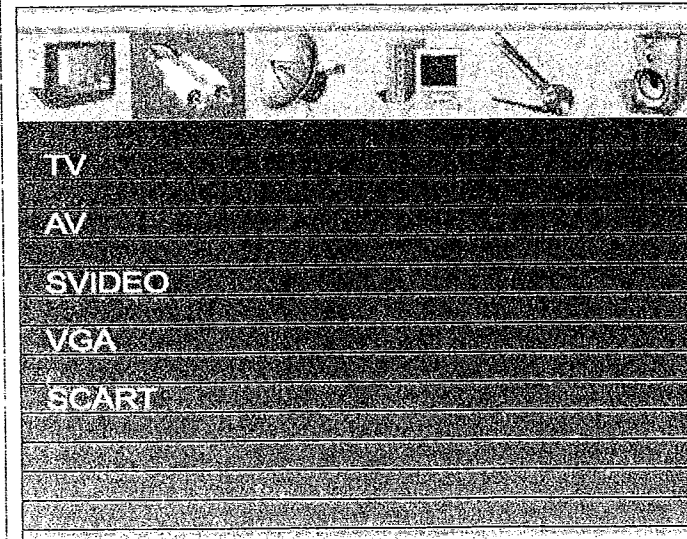    Meny Navn	Meny bilde	Instruksjon
Audio Menu		1. Volume 2. Bass 3. Treble 4. Balance
SetUp Menu		1. OSD Language: Change the language of the menu. 2. OSD Position: Press ► enter to adjust OSD Position as follow:  3. OSD Timer 4. DCDi 5. Factory Reset
Select input source Menu		1. TV 2. AV 3. SVIDEO 4. VGA 5. SCART ● Press ▲ / ▼ button to select one of it, then press ENTER to confirm your selection. Then the input source will change to it.

Input mode: VGA

 
 
1. Press key **MENU** button to display the menu.
2. Press key **▲ / ▼** on the remote to select sub-menu, and press **ENTER** to enter, and press **▲ ▼ ◀ ▶** to change the parameters.
3. Press **MENU** on the remote to return to main menu.

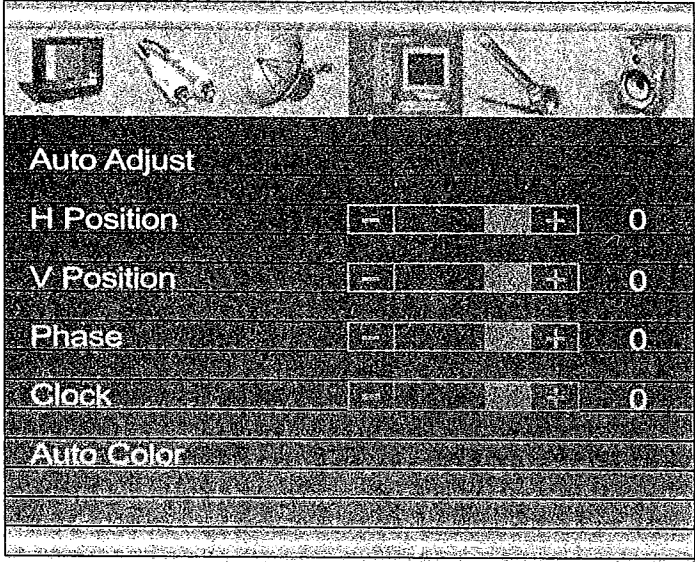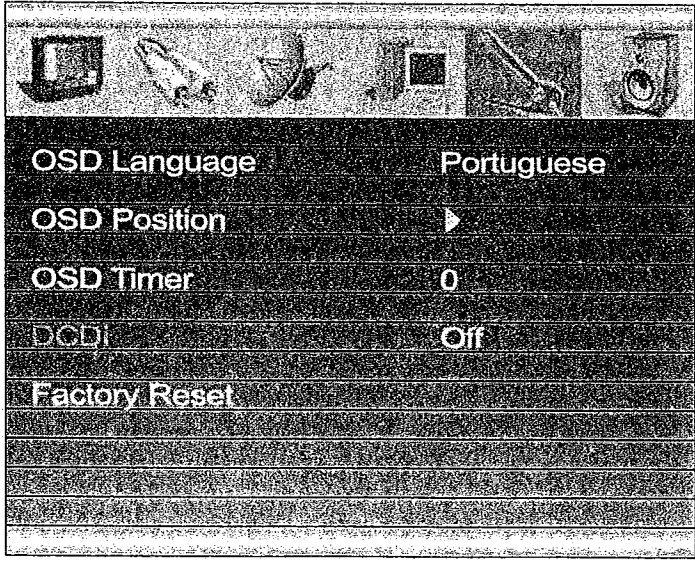Name of submenu	Picture of submenu	Instructions
Image Menu		1. Auto Adjust 2. H Position 3. V Position 4. Phase 5. Clock 6. Auto Color ● Press ◀ ▶ to adjust.
SetUp Menu		1. OSD Language 2. OSD Position 3. OSD Timer 4. DCDi (disable) 5. Factory Reset


NOTE: The Audio and Input Source Menu of VGA are the same as AV's.

Input mode: TV

  
1. Press key **MENU** button to display the menu.
2. Press key **▲ / ▼** on the remote to select sub-menu, and press **ENTER** to enter, and press **▲▼◀▶** to change the parameters.
3. Press **MENU** on the remote to return to main menu.

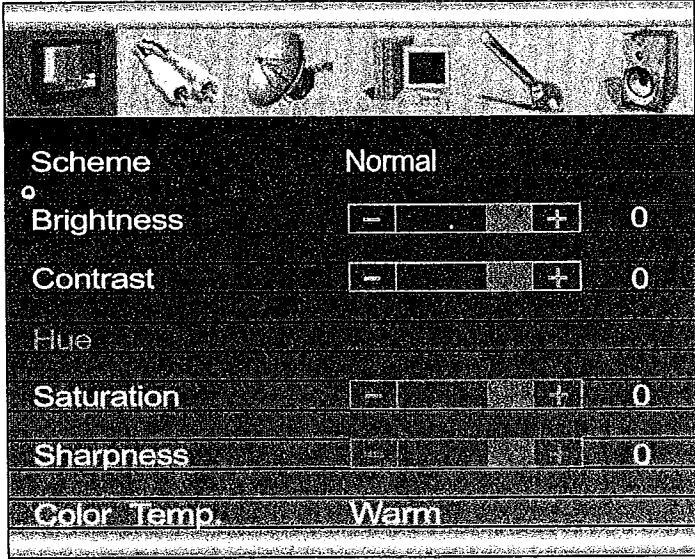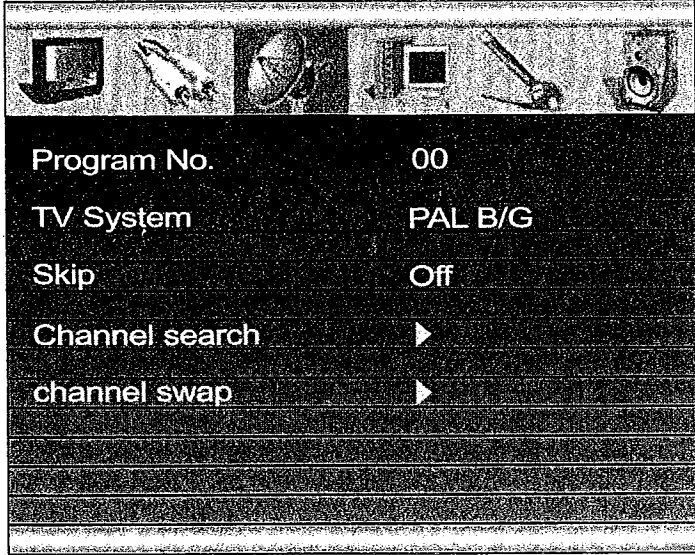Name of submenu	Picture of submenu	Instructions
Image Menu	 The screenshot shows the Image Menu with the following settings: - Scheme: Normal - Brightness: 0 - Contrast: 0 - Hue: (disabled) - Saturation: 0 - Sharpness: 0 - Color Temp.: Warm	1. Scheme: There are for mode: Normal / Vivid / Sports / Natrue. 2. Brightness 3. Contrast 4. Hue(NC): This item is disable but at NTSC system. 5. Saturation 6. Sharpness 7. Color Temp: There are for mode: Cool / Warm / Standard.
TV Set Menu	 The screenshot shows the TV Set Menu with the following settings: - Program No.: 00 - TV System: PAL B/G - Skip: Off - Channel search: ▶ - channel swap: ▶	1. Program No. 2. TV System: Press ◀/▶ button to select one of TV system as PAL / SECAM D/K . 3. Skip 4. Channel search (Please refer to Page 15.) 5. Channel swap


 
Channel search: Press ► button enter channel search as follow:

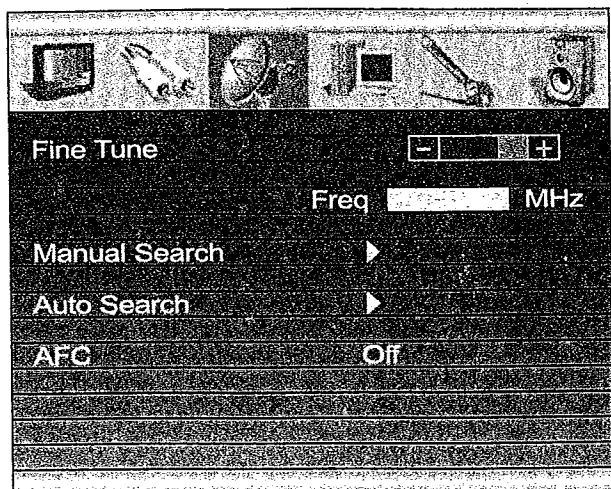

 
1. Press ◀/▶ button to adjust Fine Tune.
2. Press ► button enter to manual search as follow, press MENU / EXIT button to stop it.

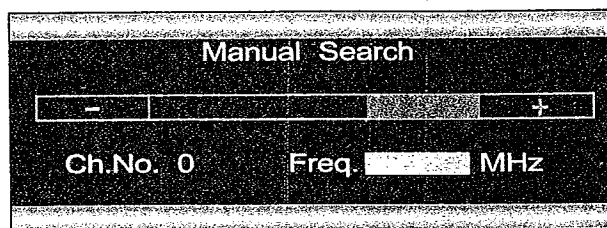

  3. Press ► button enter to auto search as follow, press MENU / EXIT button to stop it.

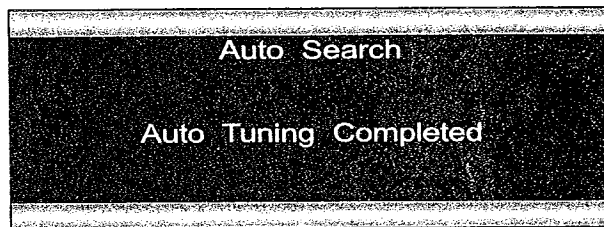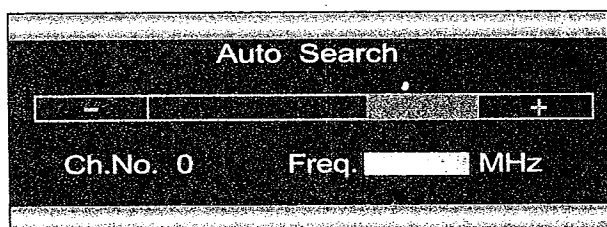

 4. Press ► button enter channel swap as follow:

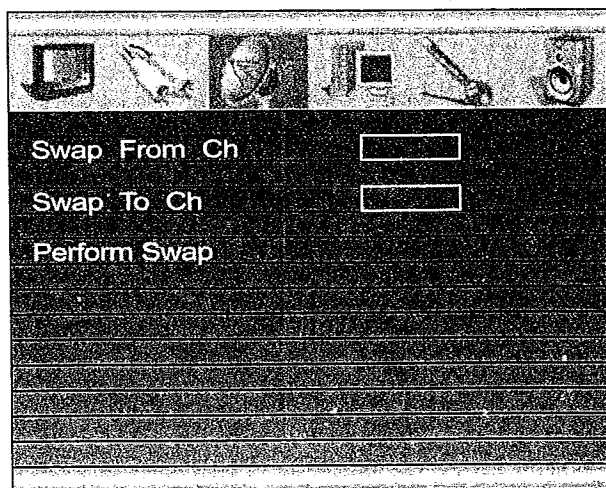

NOTE: The Audio and Input Source Menu of TV are the same as AV's.