


## INSTALLATION


Install the wiper motors from inside of the windshield. The motors are preset to wipe either a sweep of  $80^\circ$  or  $110^\circ$ . Both STD and WMW motors will automatically park to the left end of the sweep (see sketch below) when turned off.

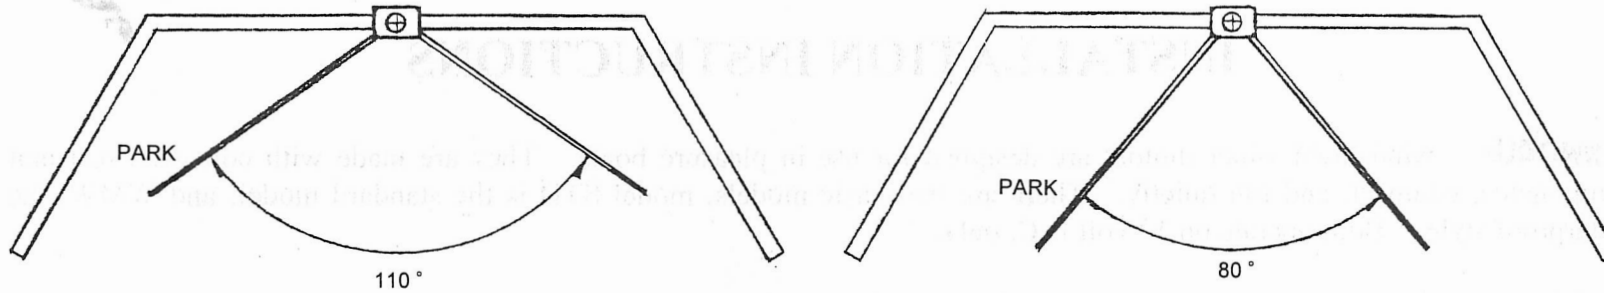


**CAUTION:** Use light weight hardware (arm & blade) only. Look for **SEAWORLD** stainless steel wiper arms and blades for most effective wiping effect. These motors are not suitable for use with heavy duty wiper arms and blades.

## WIRING

Refer to the wiring diagrams below for wiring instructions:

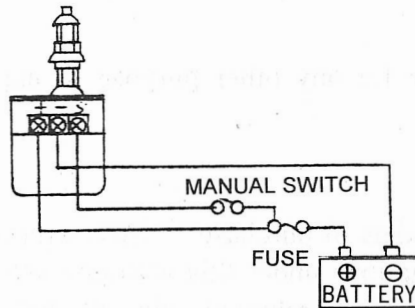

Model STD

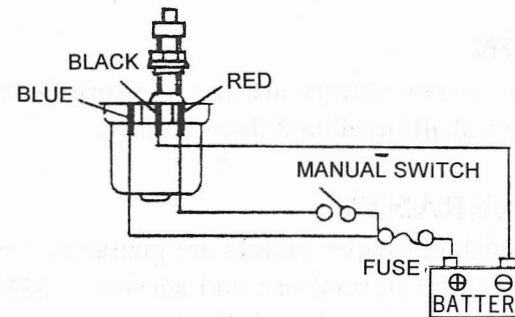

Model WMW

**SEAWORLD** is the registered trade mark of Khan's Ent. Co., Taoyuan, Taiwan