



Båtstøtte Boat Stand


Beslag / Brackets

NO Montasjeveiledning

side 2-6

ENG Assembly instructions

page 7-11

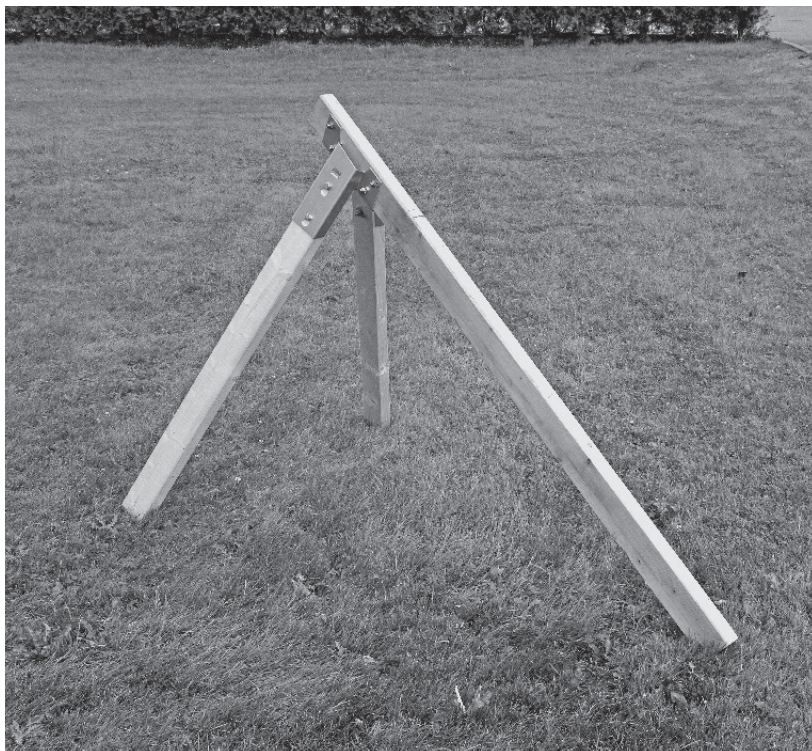

Figur 1 - ferdig montert båtstøtte.

Her vises støttebjelke med lengde 180 cm samt 2 ben á 120 cm. Dimensjon er 48 x 98 mm. Alle bjelkene kappes til i 90 graders vinkel på endene. Tilpassning av vinkling mot bakken er ikke nødvendig.


Vær oppmerksom på at esken inneholder to høyre og to venstre beslag. Beslagene i esken kan avvike noe fra bildene her, men fremgangsmåten for montering er den samme.



- ① Legg beslaget på toppbjelken (den på 180 cm), med "leppa" i underkant oppunder bjelken. Merk av for boring innenfor de fire hullene.



- ② Bor hullene, gjerne med 11 mm bor for litt ekstra rommelighet (skruen = 10 mm)

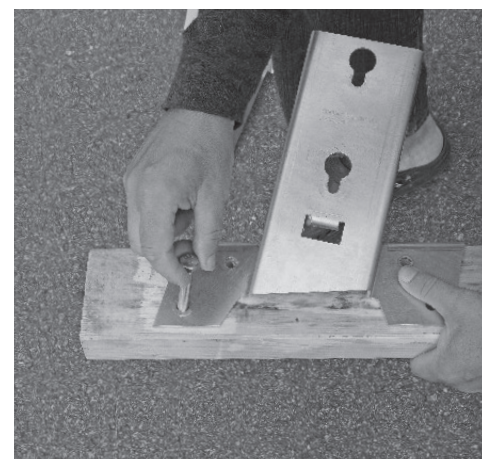


- ③ Sett inn den første skruen.




- ④ Legg bjelken "på ryggen" som bildet viser. Dette for enklere montasje av beslag nr 2.




5 Her er begge beslagene på plass.

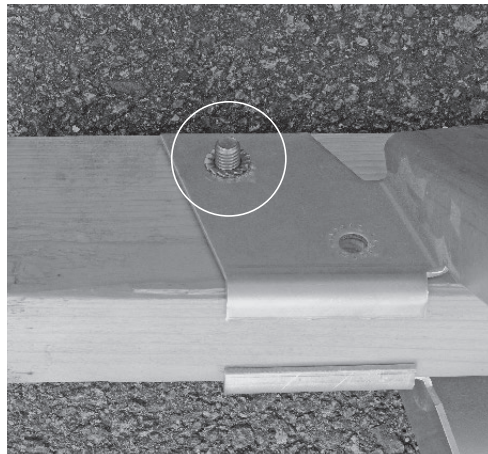


6 Tre på taggskiven mot beslaget.

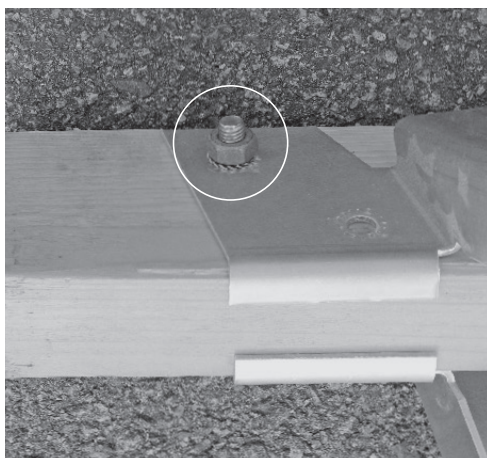


7 Sett på mutteren og skru til.

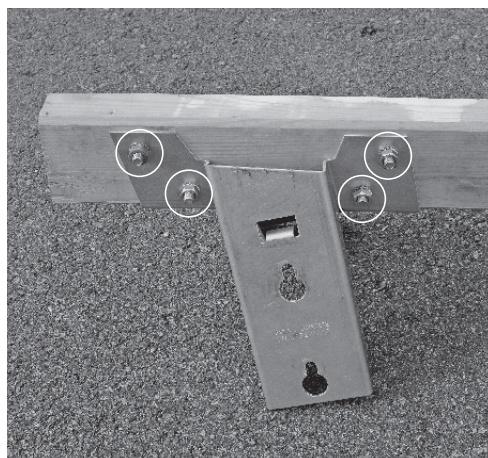

8 Sett inn de resterende 3 boltene og gjenta punkt 6 og 7.

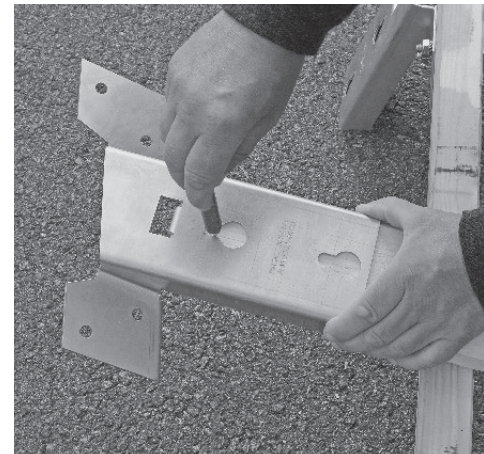

9 Montasje av av skruene på bena. Legg beslaget som bildet viser. Skyv inn til stopperen og merk av for boring øverst i beslaget.

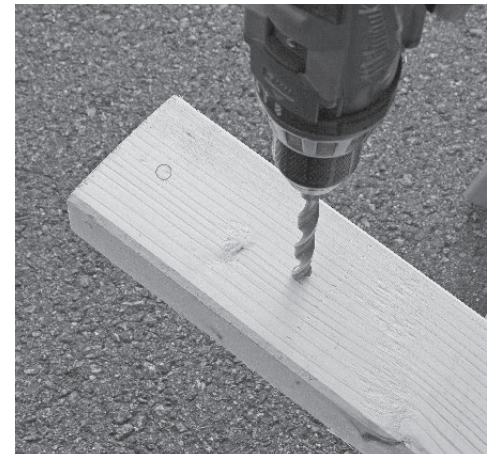


10 Bor hullene som nå er avmerket.




11 Ferdig borede hull.




12 Sett i skruene UTEN skiver på hodet av skruene.

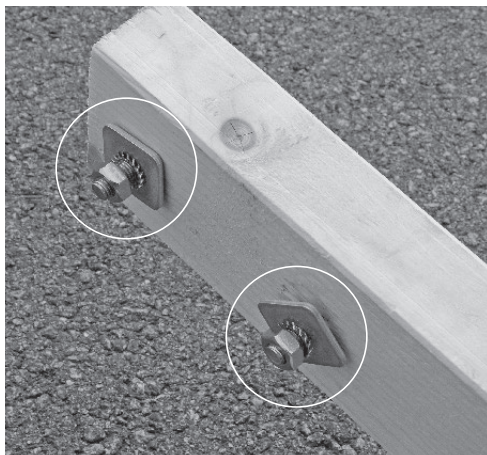

- 13 Sett først på 4-kant skivene mot trevirke, så taggskiver, og deretter muttere. NB! IKKE SKRU TIL DISSE ENNÅ.

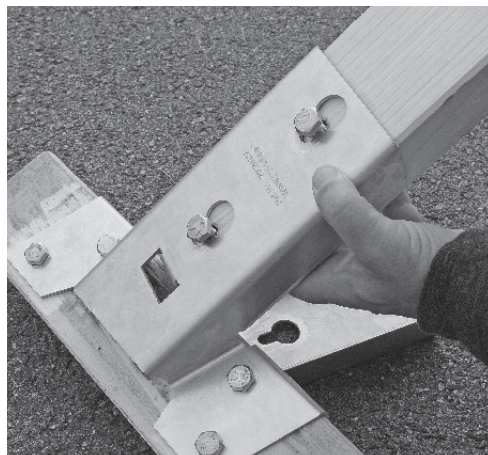

- 14 Skyv benet med skruhodet inn i beslaget.

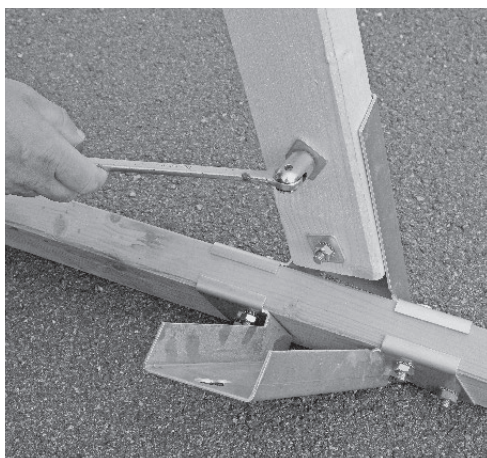

- 15 Skru til med 17" nøkkel eller skiftenøkkel.



- 16 Gjenta punktene 9-15 for montering av det siste benet.

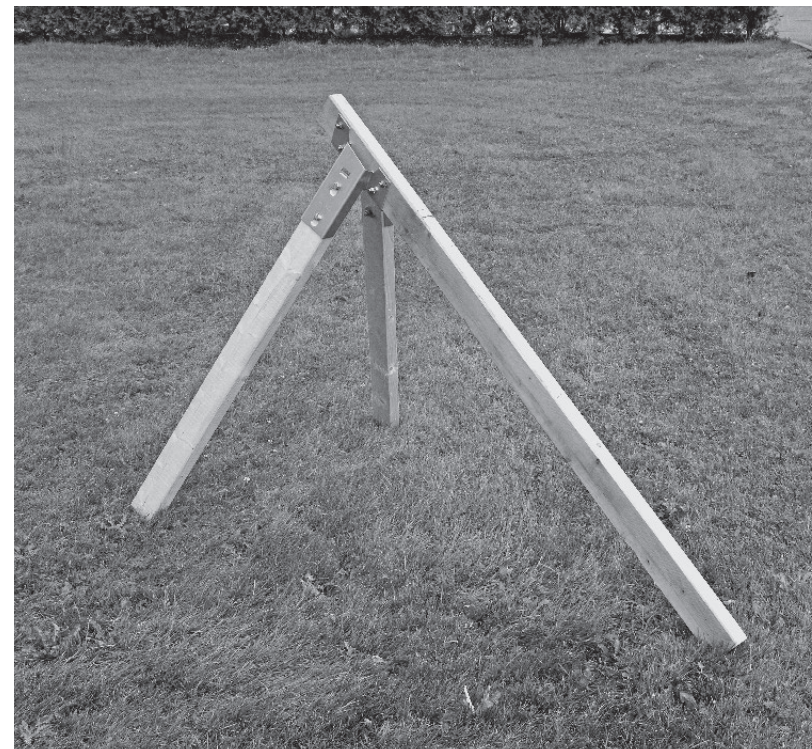


Figure 1 - Ready assembled boat stand.

The photo shows a support beam 180 cm in length together with two legs each 120 cm long. Its dimensions are 48 x 98 mm. All sections are cut at a 90 degree angle at the ends. There is no need to adjust the angles to the ground.


Note that the box contains two right and two left brackets. The brackets in the box may differ somewhat from those shown in the photos, but the assembly procedure is the same.



- ① Place the bracket onto the top beam (the 180 cm one), with the lip along the lower edge under the beam. Mark the drilling points inside the four holes.



- ② Drill the holes, ideally with an 11-mm bit to give a little extra clearance (screw = 10 mm)

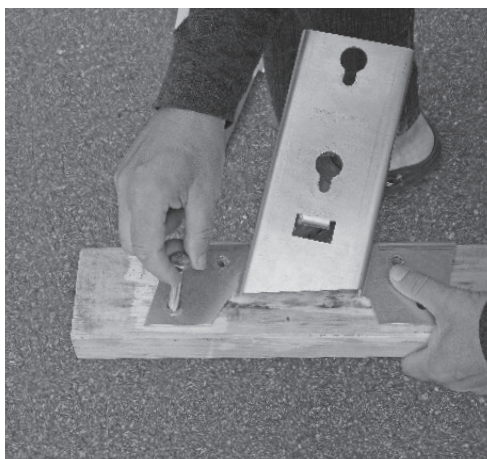


- ③ Insert the first bolt.




- ④ Place the beam on its back as shown in the photo. This makes it easier to fit bracket no. 2.




- ⑤ Both brackets are shown in place here.

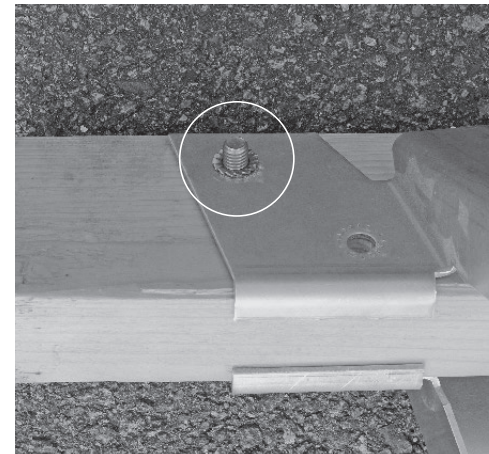


- ⑥ The wood is now in place with a serrated washer against the bracket.

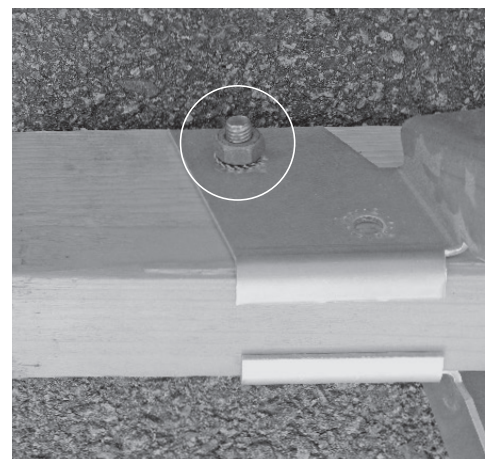


- ⑦ Place a nut onto the bolt and screw it on tight.

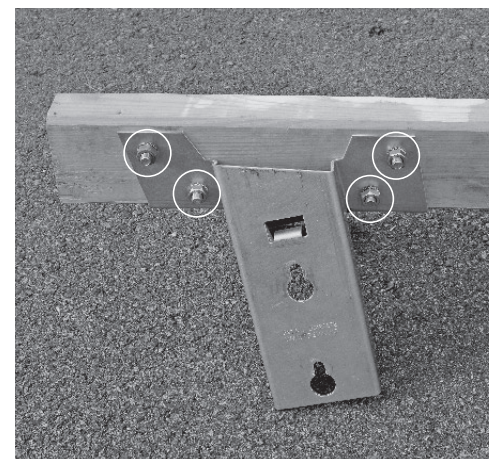


- ⑧ Insert the remaining three bolts and repeat points 6 and 7.

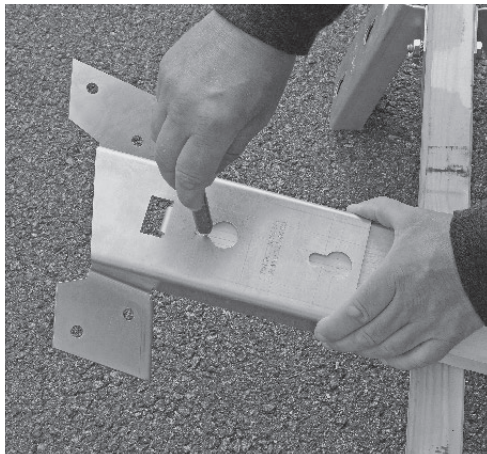

- 9 Fitting the bolts to the legs. Place the bracket as shown in the photo. Push it up to the stop and mark for drilling at the top of the bracket.

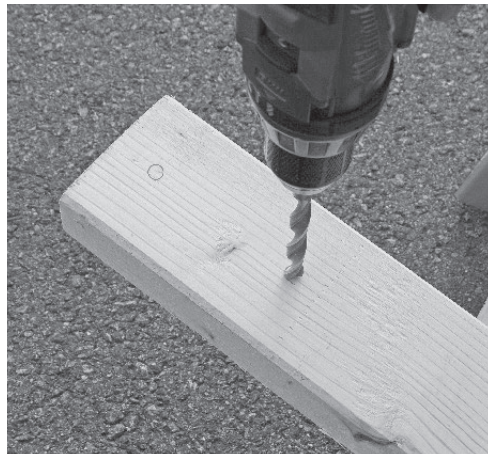


- 10 Drill the marked holes.

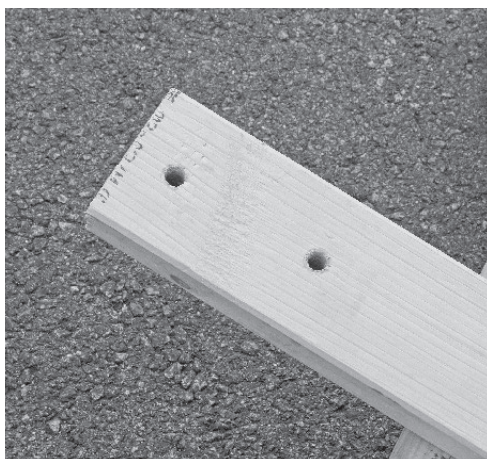


- 11 The drilled holes are shown.




- 12 Insert the bolts WITHOUT washers.

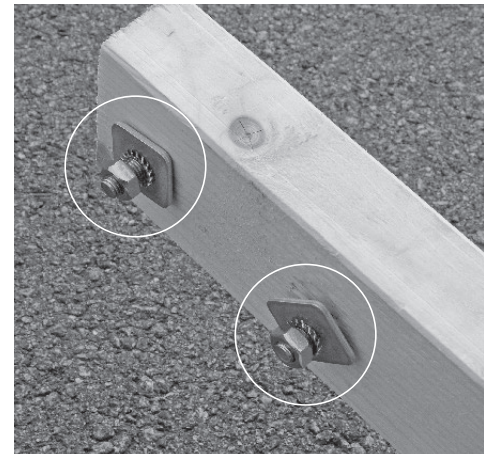

- 13 First place the rectangular washers against the wood, then the serrated washers, and finally the nuts. NB! DO NOT TIGHTEN THESE YET.

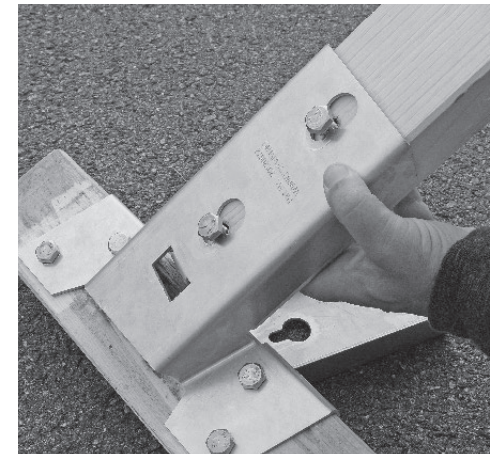

- 14 Slide the leg with the bolts into the bracket.

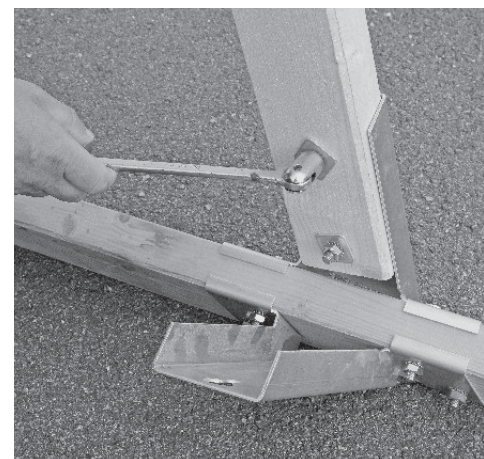

- 15 Tighten the bolts with a 17" spanner or a wrench.



- 16 Repeat steps 9-15 to fit the last leg.

Frevini Beslag AS

© 2014

Alle rettigheter reservert

All rights reserved

Made in Norway

www.frevini.no

