


AquaAmp

INSTALLATION INSTRUCTIONS


DUAL USB-C CHARGER

PARTS PROVIDED

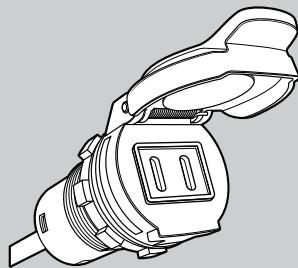


Dual USB-C Charger

TOOLS REQUIRED

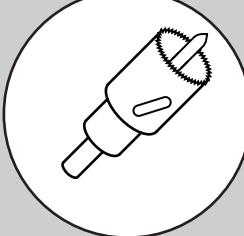


1 1/8" Hole Saw

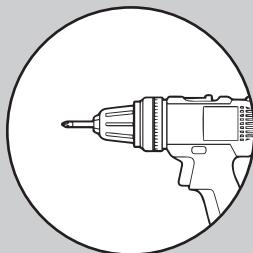


Electric Drill

INSTALLATION GUIDE

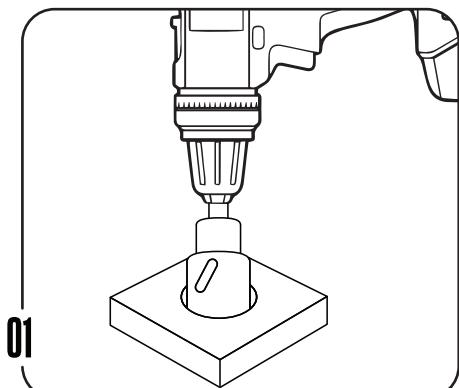


01

STEP 1: Drill or cut 1 1/8" hole.

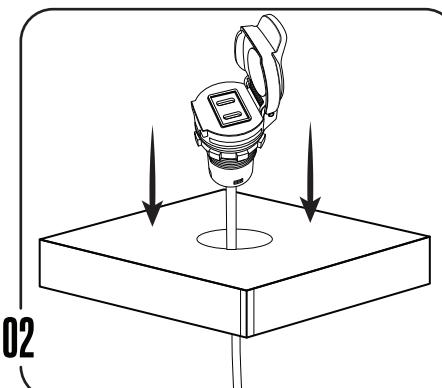


02

STEP 2: Insert charger into hole.

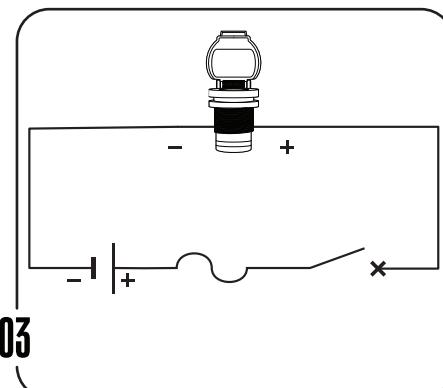

03

STEP 3: Using a 3A fuse, attach wires to a 12v power supply and ensure there is a waterproof connection.

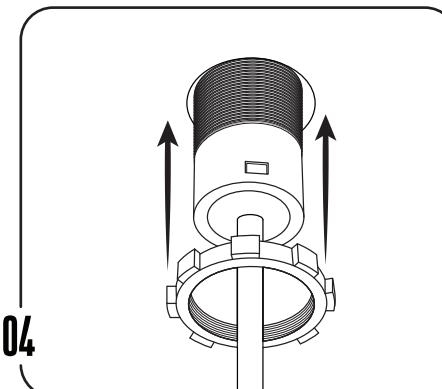

04

STEP 4: Firmly screw up the locknut.

CONTACT:

orders@aquaamp.com

13926 Monroes Business Park, Tampa, FL 33635

For further information visit www.aquaamp.com